




TYPICAL WIRING FOR ACCESS PRO USING WIEGAND DEVICE, SURE-FI SUPPLIED VBUS POWERED DOOR STRIKE, AND REQUEST TO EXIT.

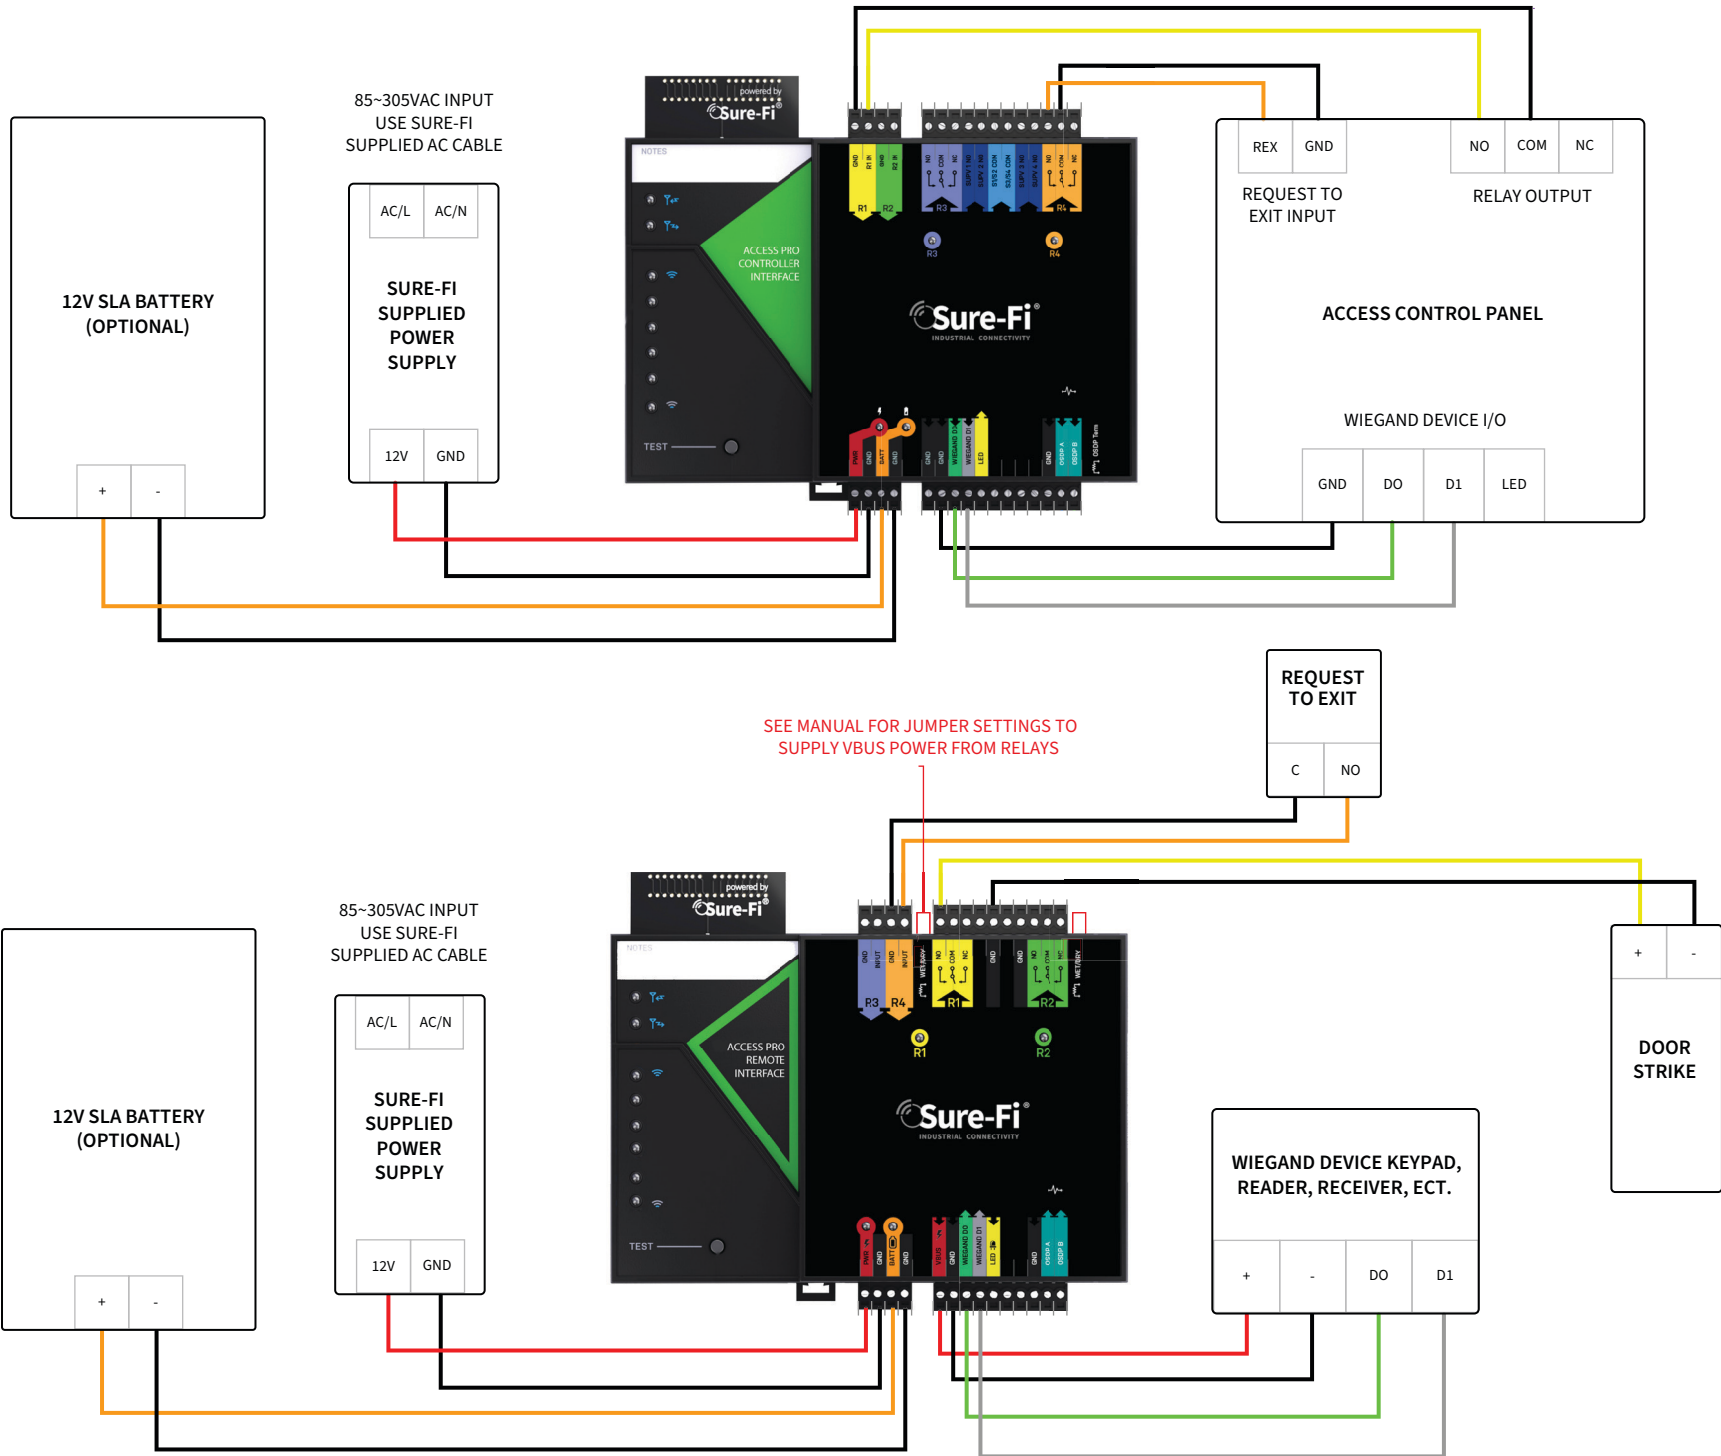


TYPICAL WIRING FOR ACCESS PRO USING OSDP DEVICE, EXTERNAL POWERED DOOR STRIKE AND REQUEST TO EXT.

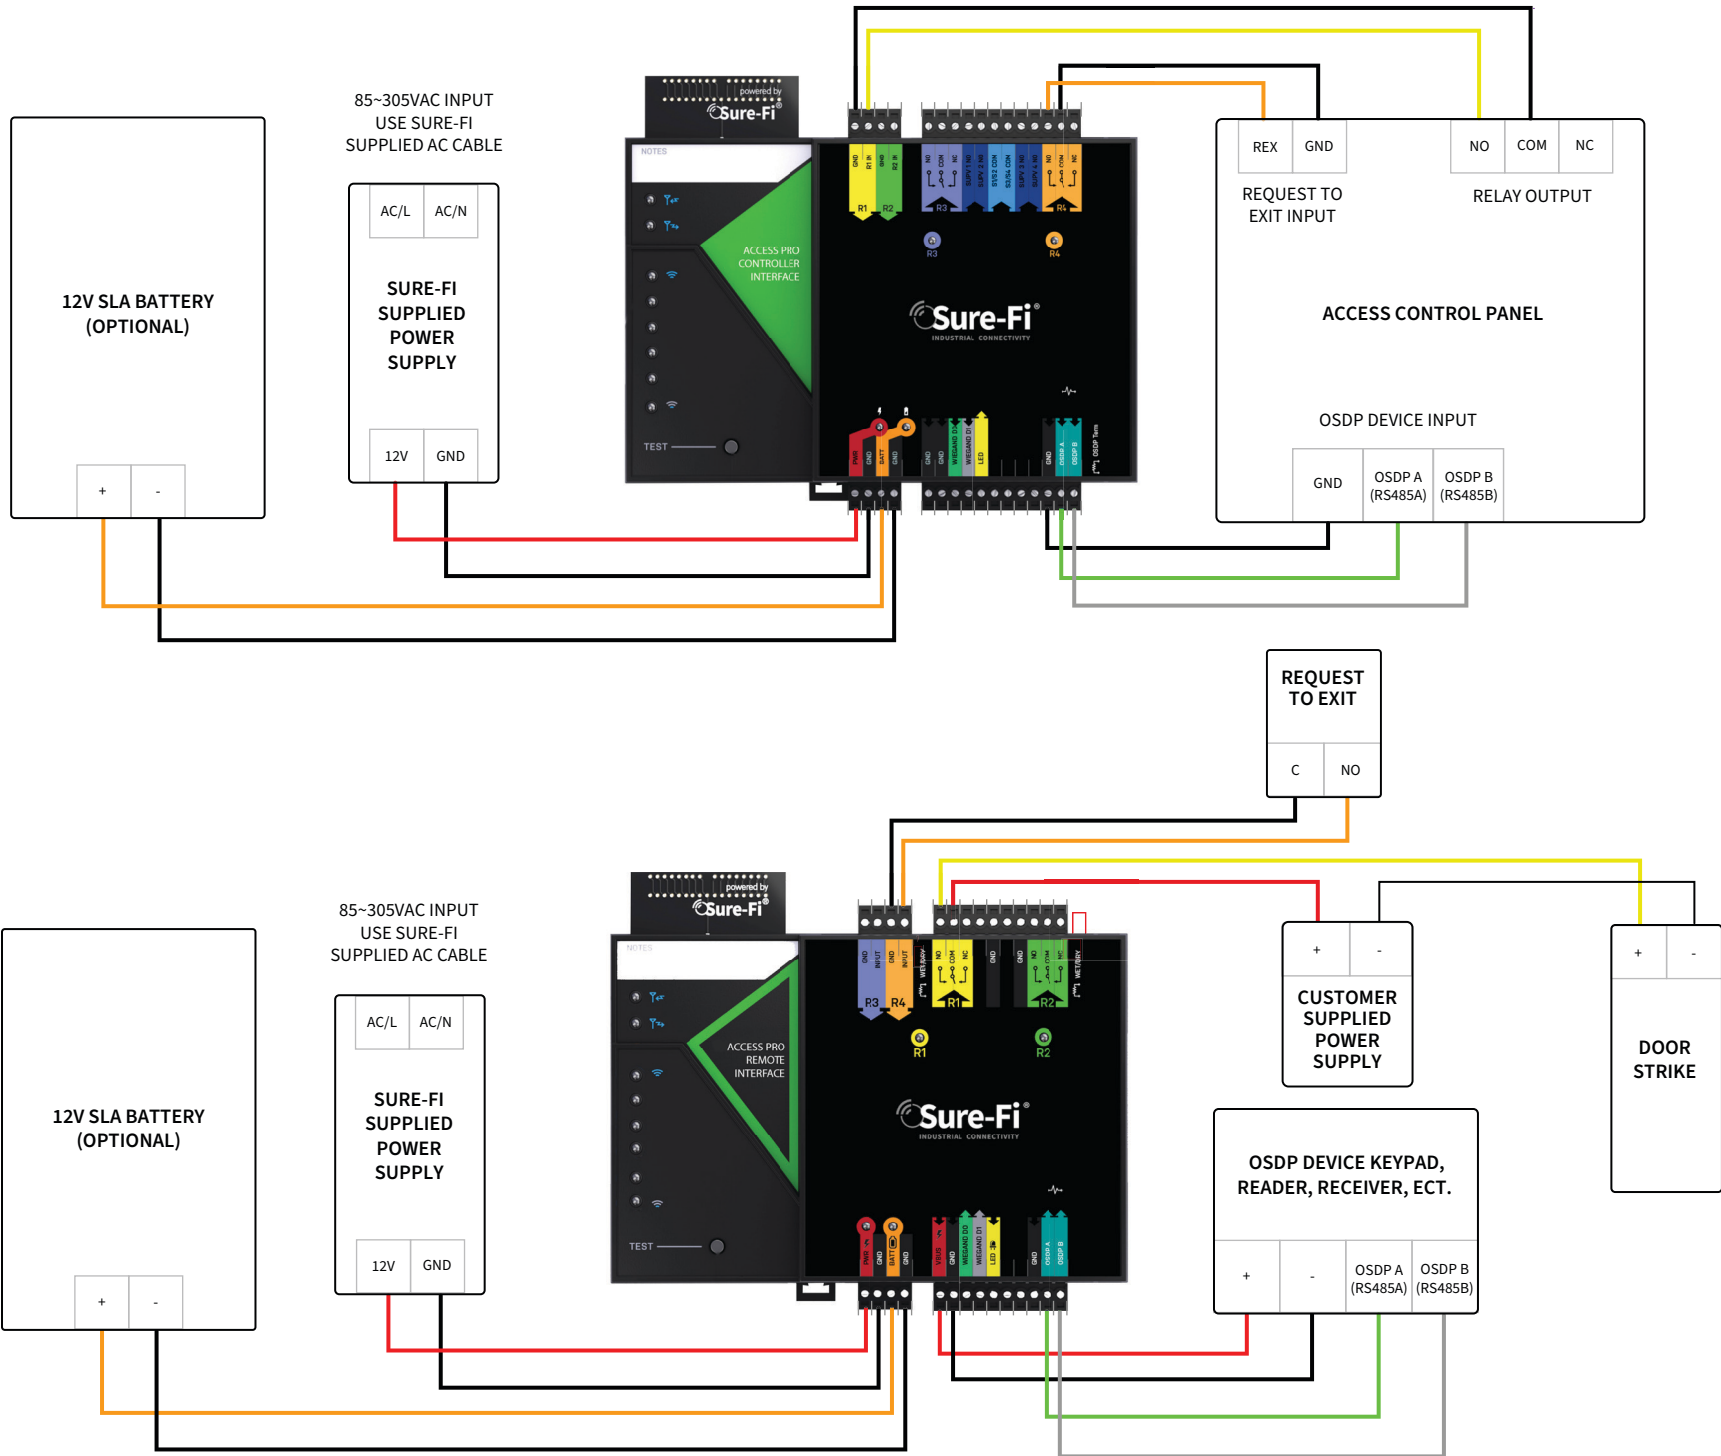


TYPICAL WIRING FOR ACCESS PRO USING OSDP DEVICE, SURE-FI SUPPLIED VBUS POWERED MAG LOCK AND REQUEST OT EXIT.

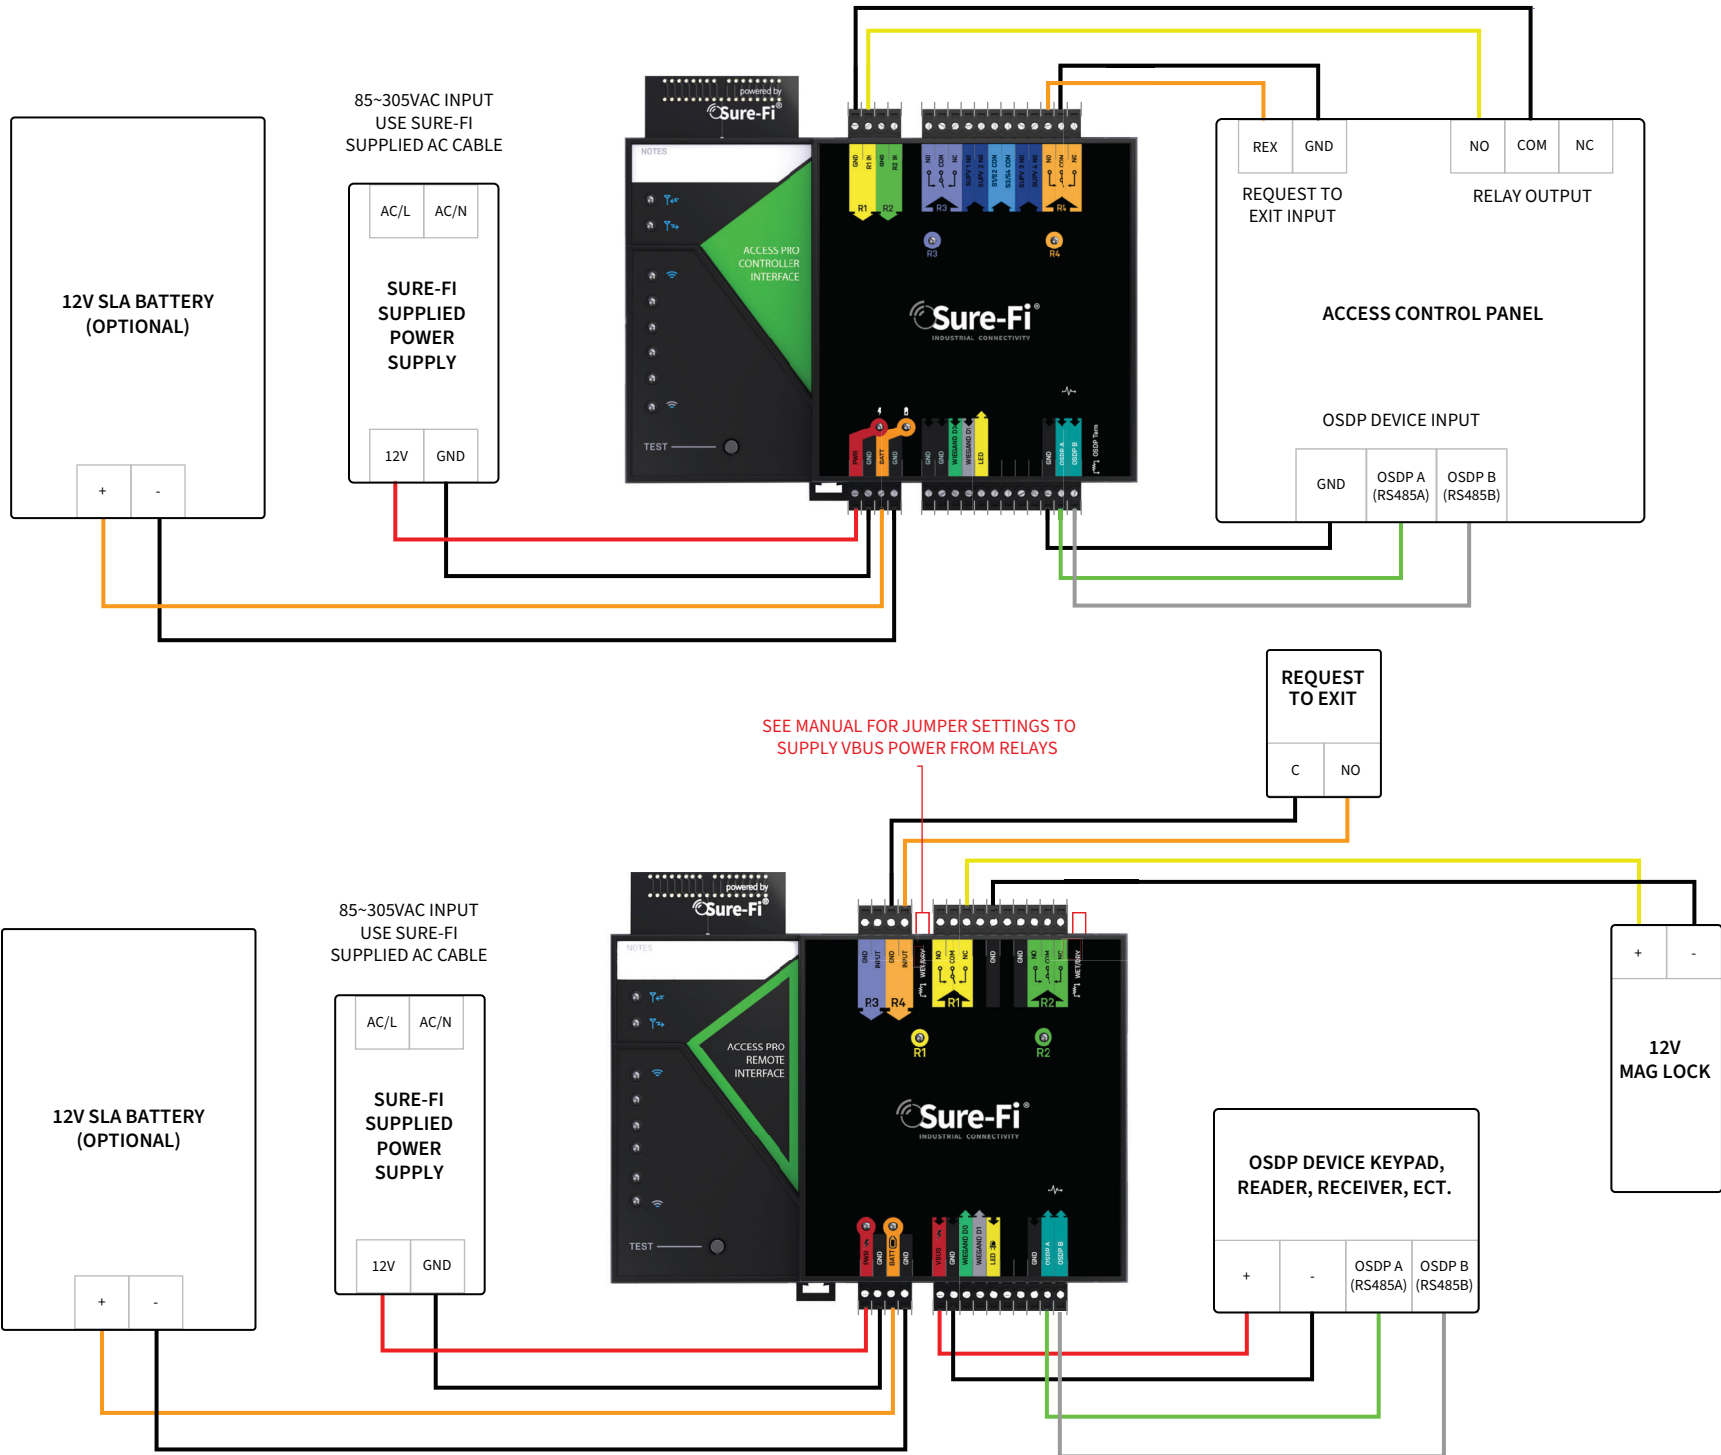


TYPICAL WIRING FOR ACCESS PRO USING OSDP DEVICE, EXTERNAL POWERED MAG LOCK AND REQUEST TO EXIT.

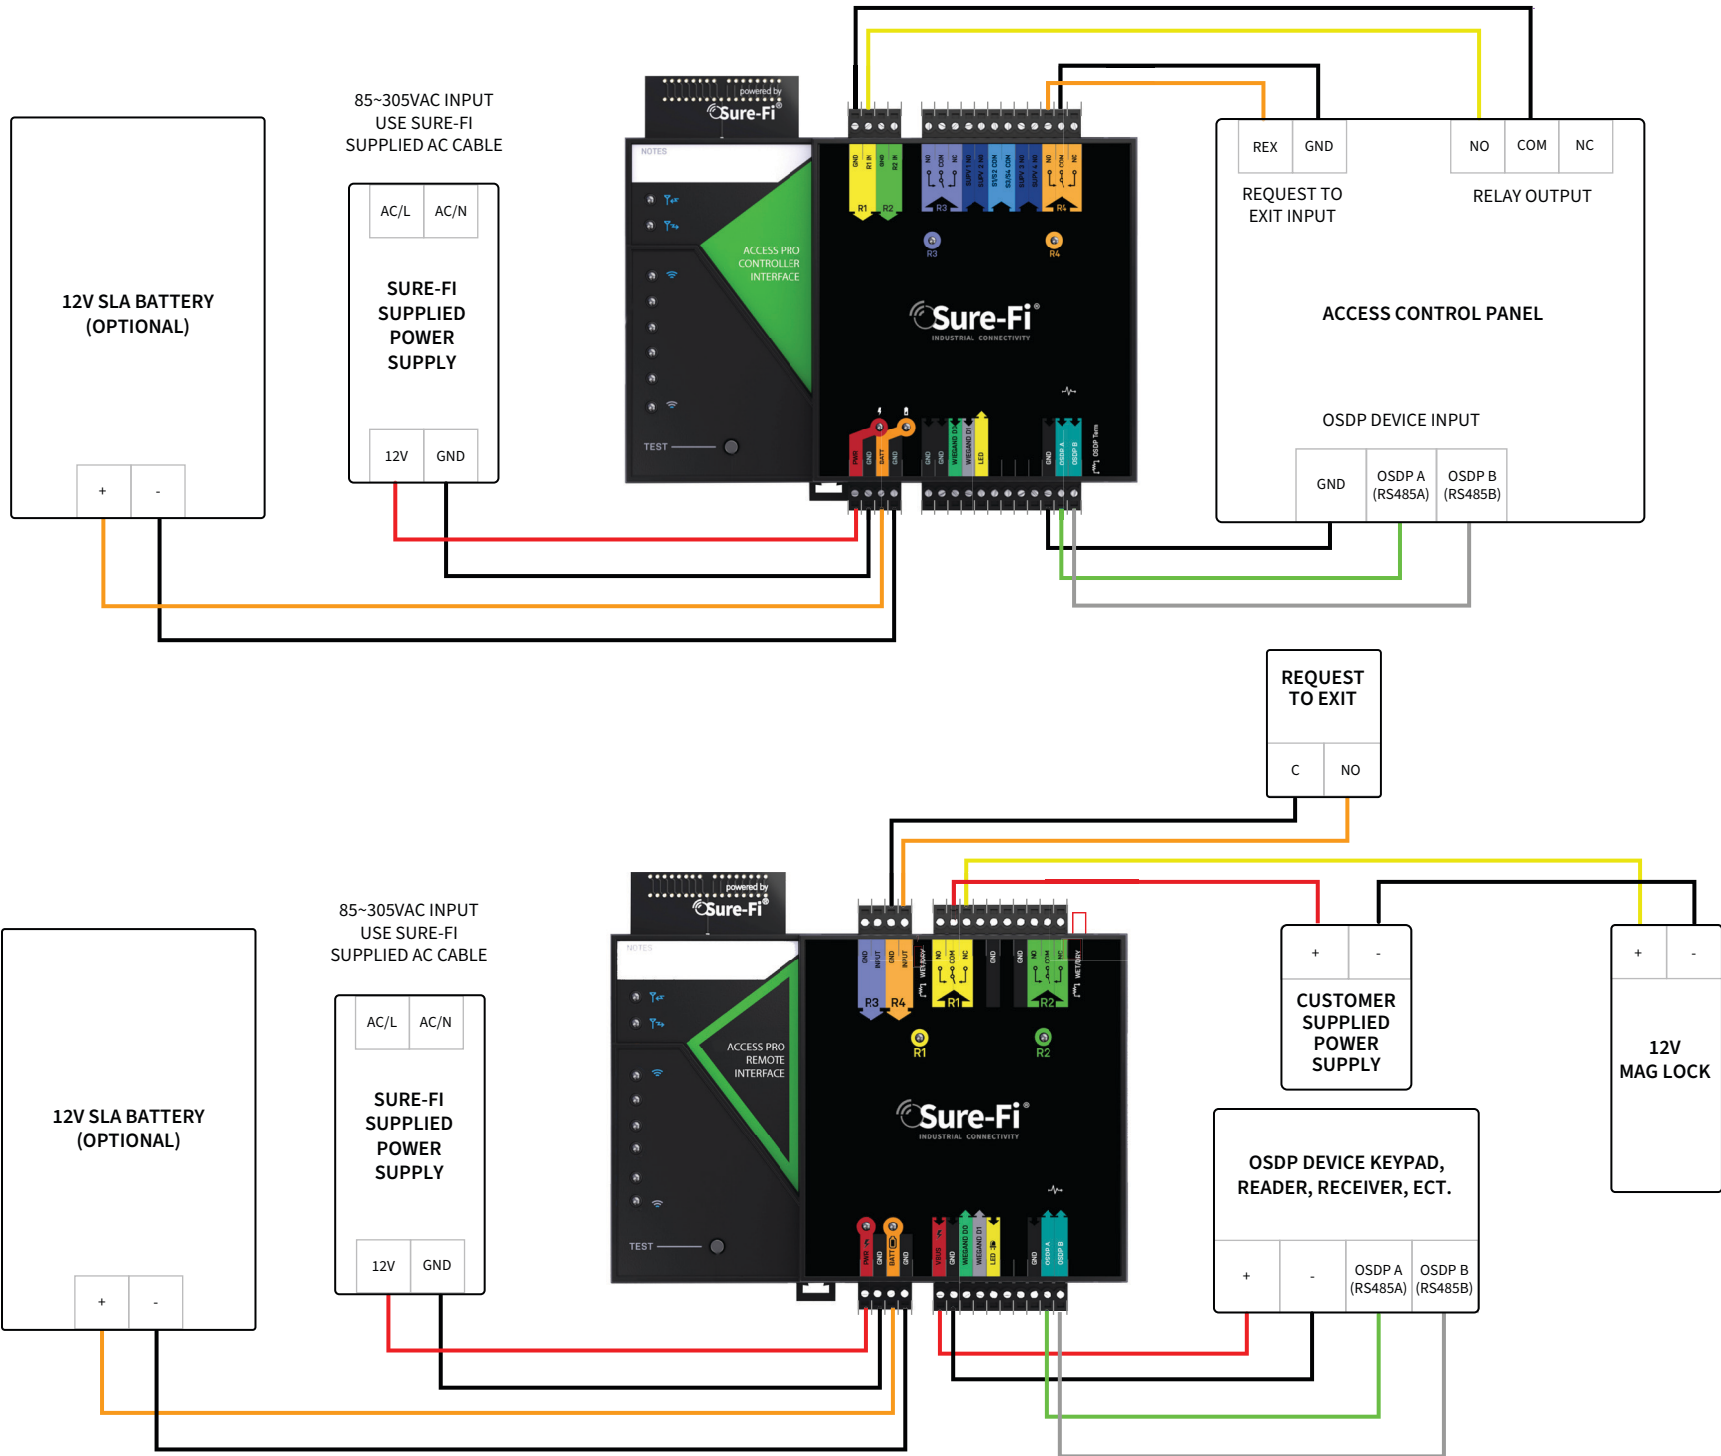


TYPICAL WIRING FOR ACCESS PRO USING OSDP DEVICE, SURE-FI SUPPLIED VBUS POWERED DOOR STRIKE AND REQUEST TO EXIT.

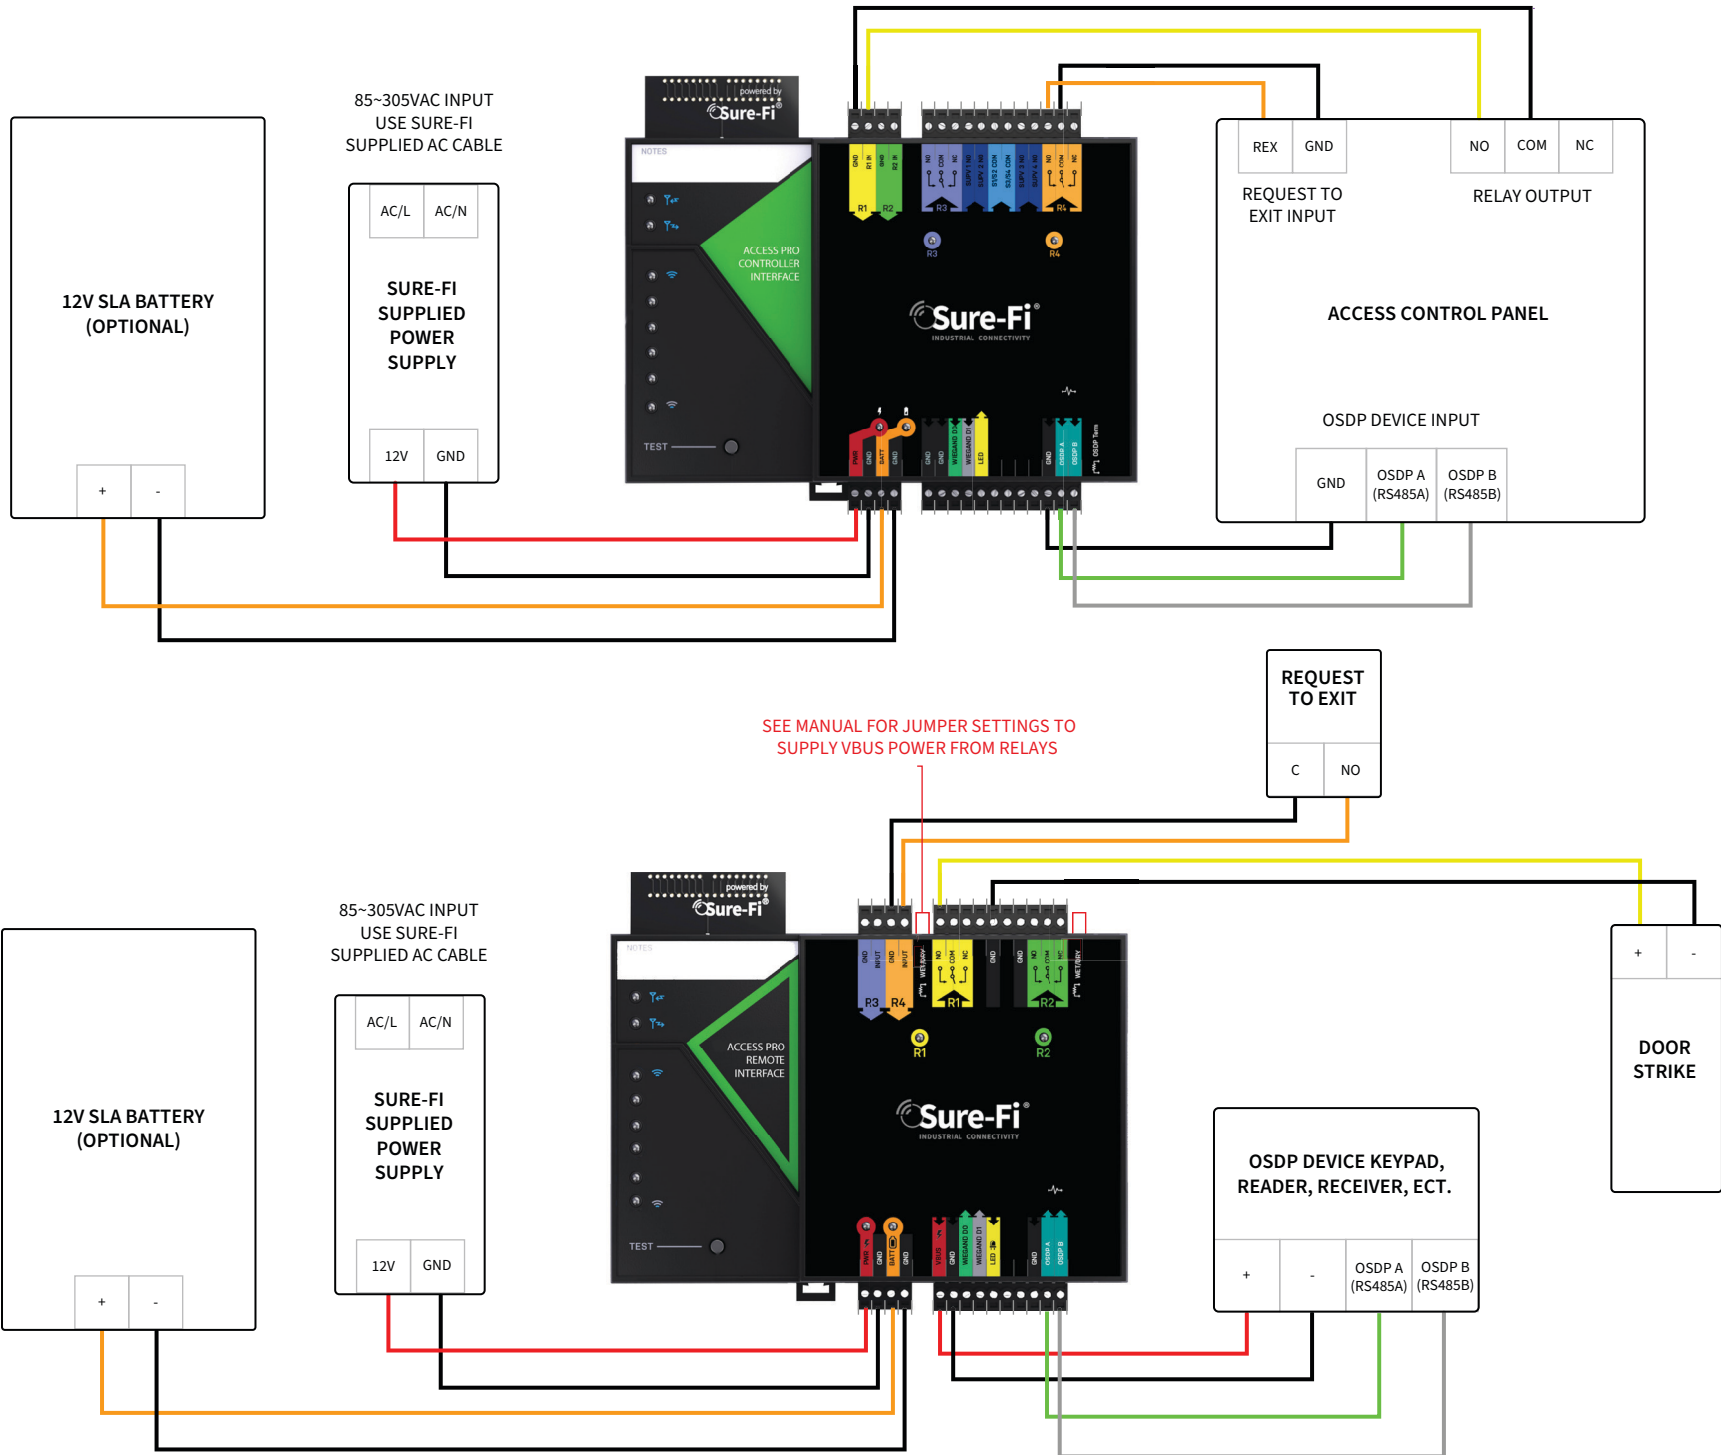

TYPICAL WIRING FOR ACCESS PRO USING WIEGAND DEVICE, EXTERNAL POWERED DOOR STRIKE AND REQUEST TO EXIT.

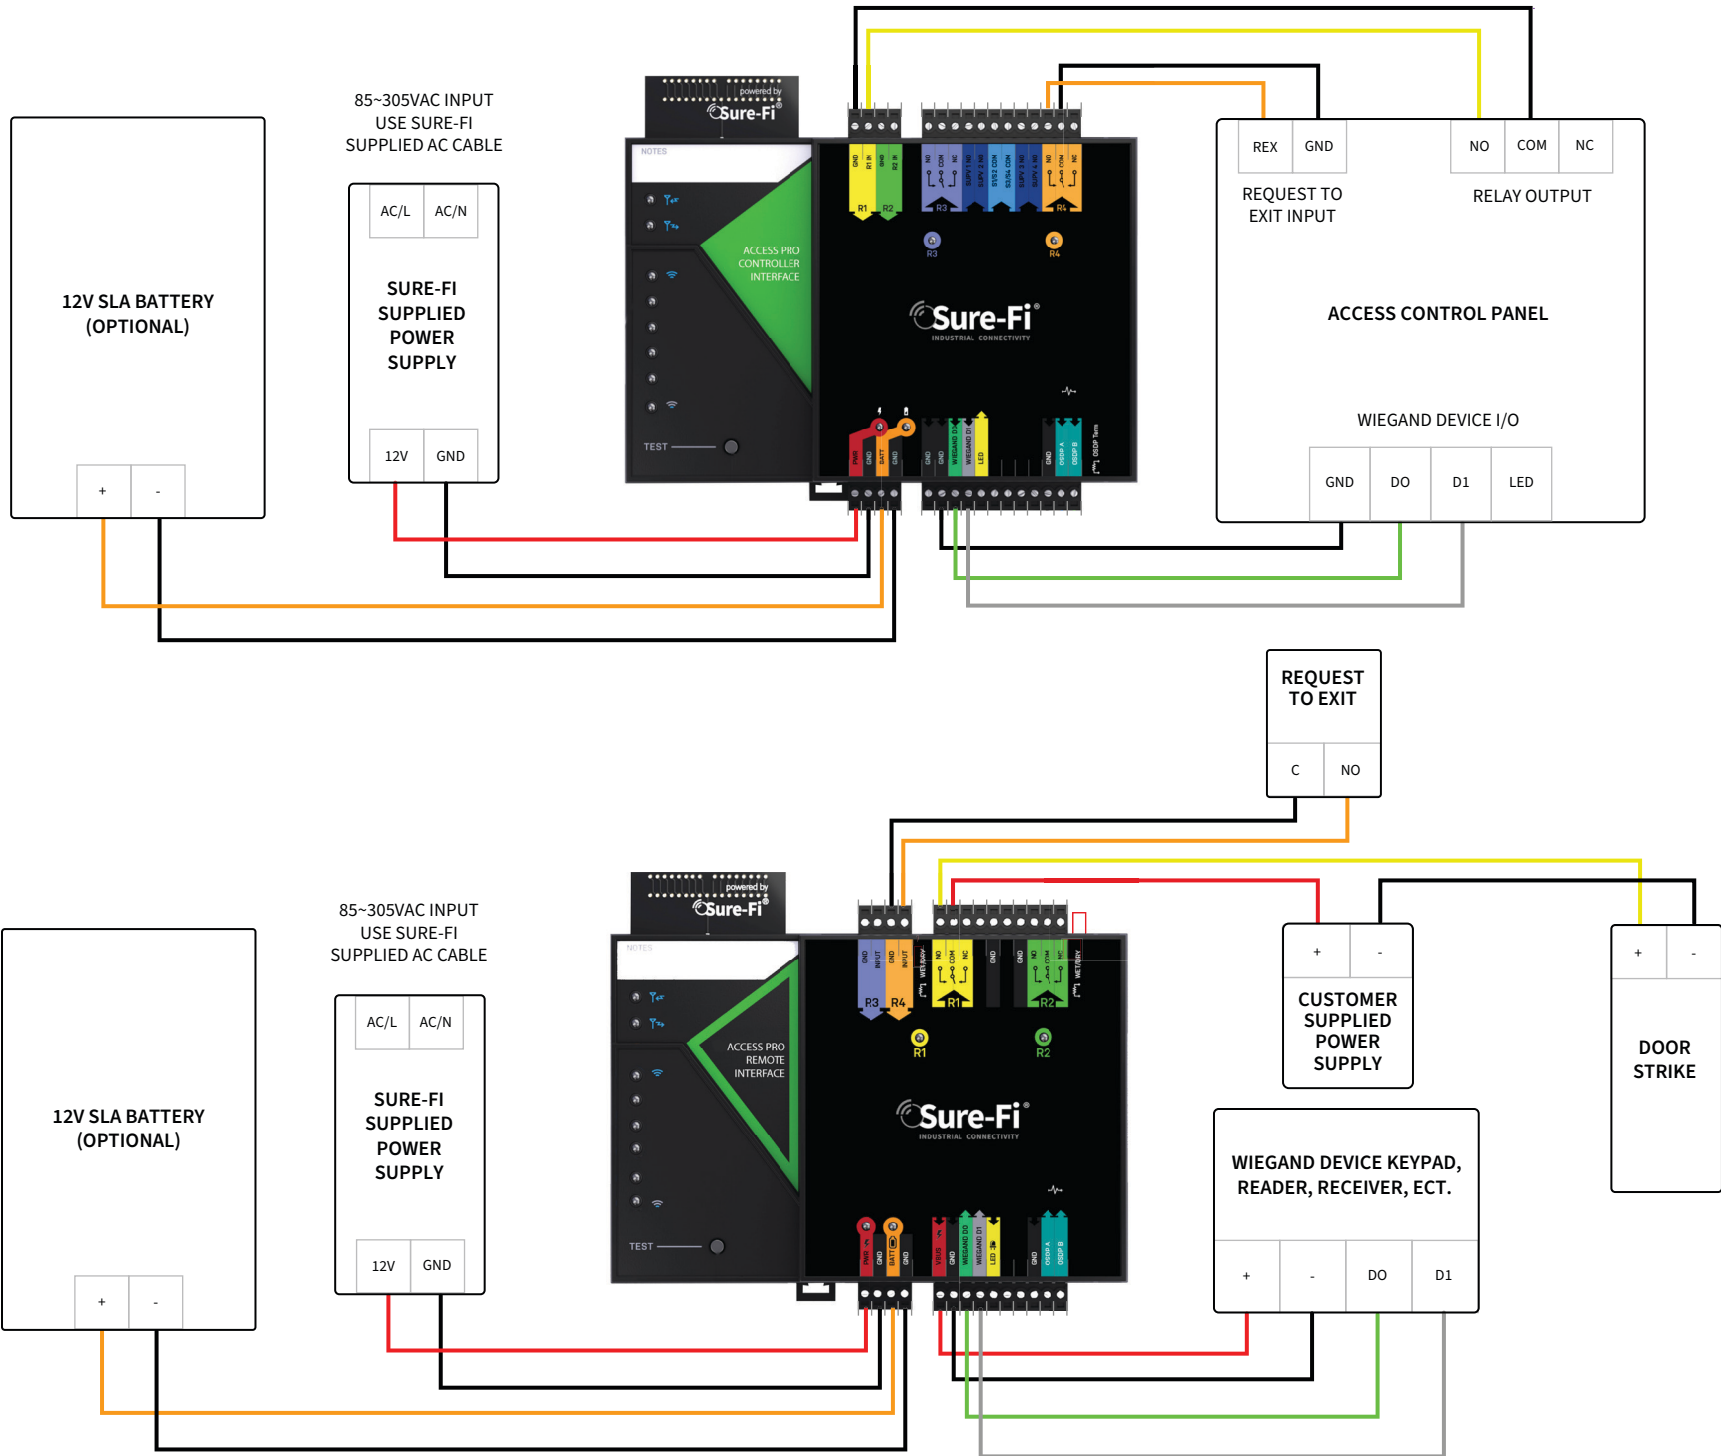

TYPICAL WIRING FOR ACCESS PRO USING WIEGAND DEVICE, SURE-FI SUPPLIED VBUS POWERED MAG LOCK AND REQUEST TO EXIT.

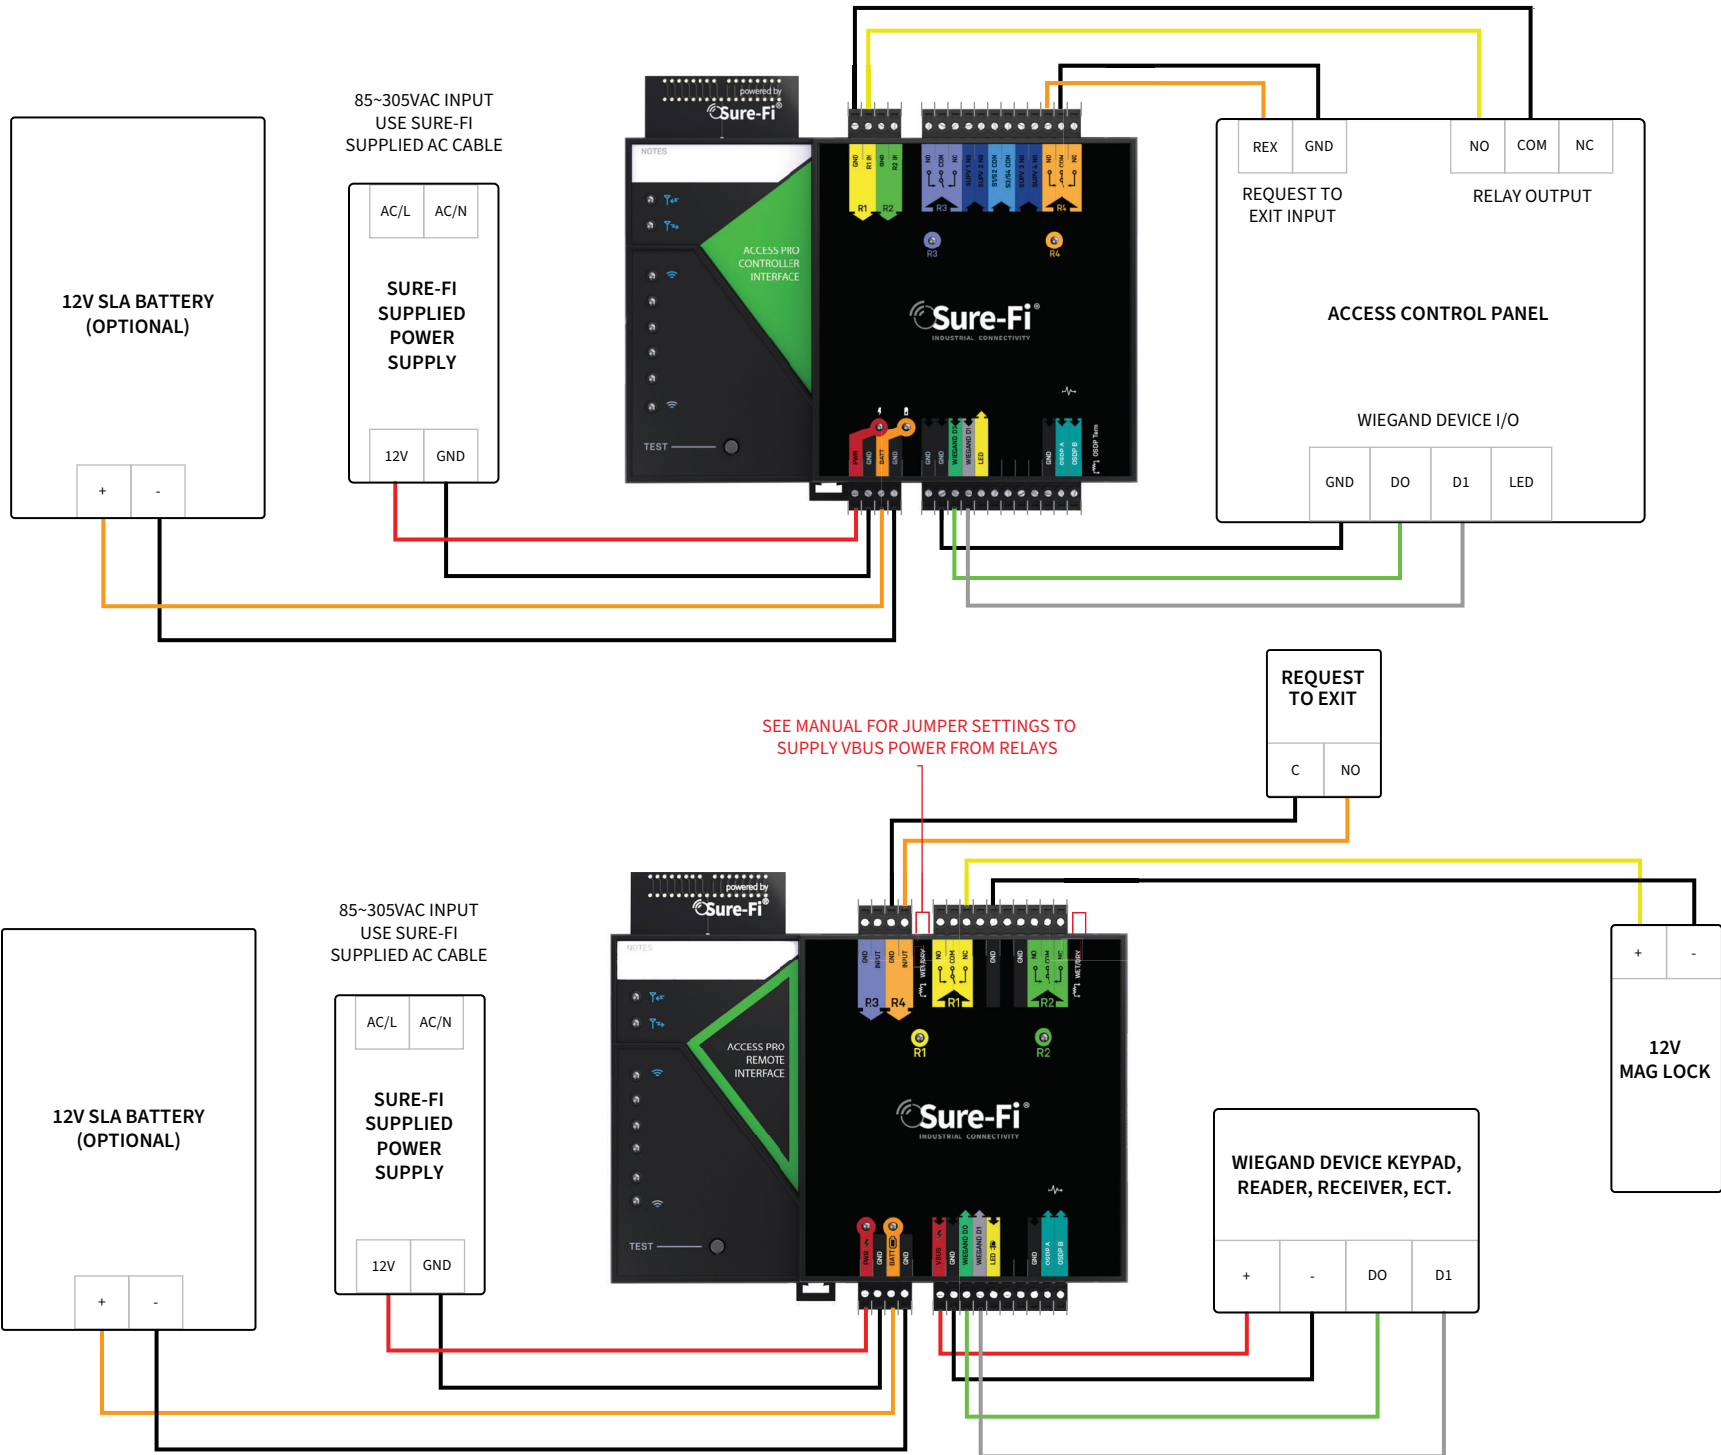

TYPICAL WIRING FOR ACCESS PRO USING WIEGAND DEVICE,
EXTERNAL POWERED MAG LOCK AND REQUEST TO EXT.

